

## To flow CAFS (foam)

- 1) Engage pump.
  - 2) Engage CAFS Compressor.
    - a) Bleed air manifold: open an air valve (not to hose) for a moment.
    - b) Close all air valves.
    - c) Raise RPMs to 1000.
    - d) Turn on CAFS Compressor.  
Switch is in cab, near pump switch.
    - e) Compressor may 'scream' after a few moments. Ignore.
  - 3) Flow water from preconnects or left 2½".
  - 4) Add surfactant (red button on foam computer, on pump panel).
  - 5) Open air valve for that hose line.
- Reverse order to shut down.